Easy Assembly Guide

Models CPS-5 and CPS-6

1

2

Parts List

Item No.	Part Description	Quantity
1	Drawer	1
2	Frame Rail (1 left, 1 right)	2
3	Cross Brace (1 front, 1 rear)	2
4	½ inch Stop Bolt	2
5	5/16 inch Nut	10
6	5/16 inch Split Lock Washer	10
7	Latch Guard Screw	6
8	Latch Guard Nut	2
9	Key	2
10	Divider	2
11	Divider Screw	8
12	Latch Guard (1 left, 1 right)	2
13	5/16 inch Bolt	2

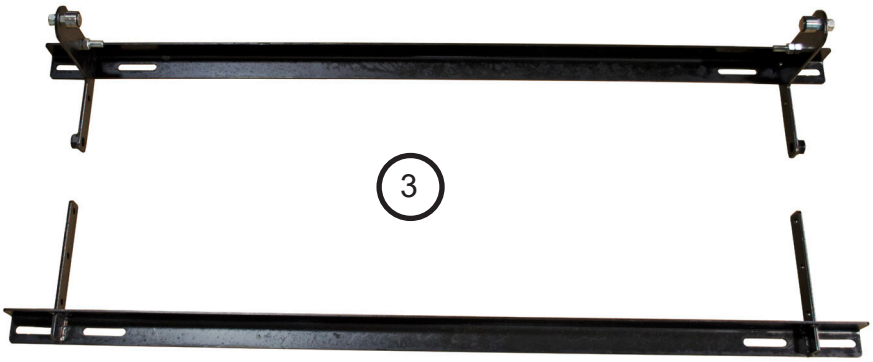

3

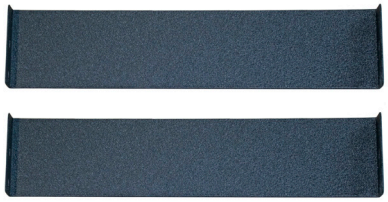

10

11

4

13

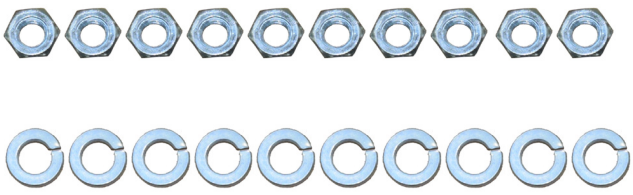

5

6

7

8

9

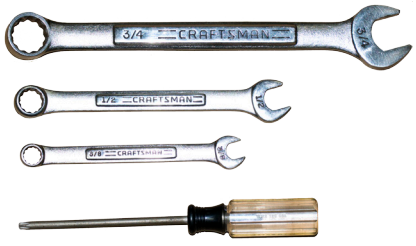

Tools
¾ inch wrench
½ inch wrench
⅜ inch wrench
T-25 Torx Driver

Thank you for purchasing this Cap-Pack® Innovative Truck Storage product. Visit our website at https://www.cap-pack.com/cpsaccessories.html for information on additional accessories.

CAUTION: The Cap-Pack® Sport is rated for 100 lb. capacity (evenly distributed weight).

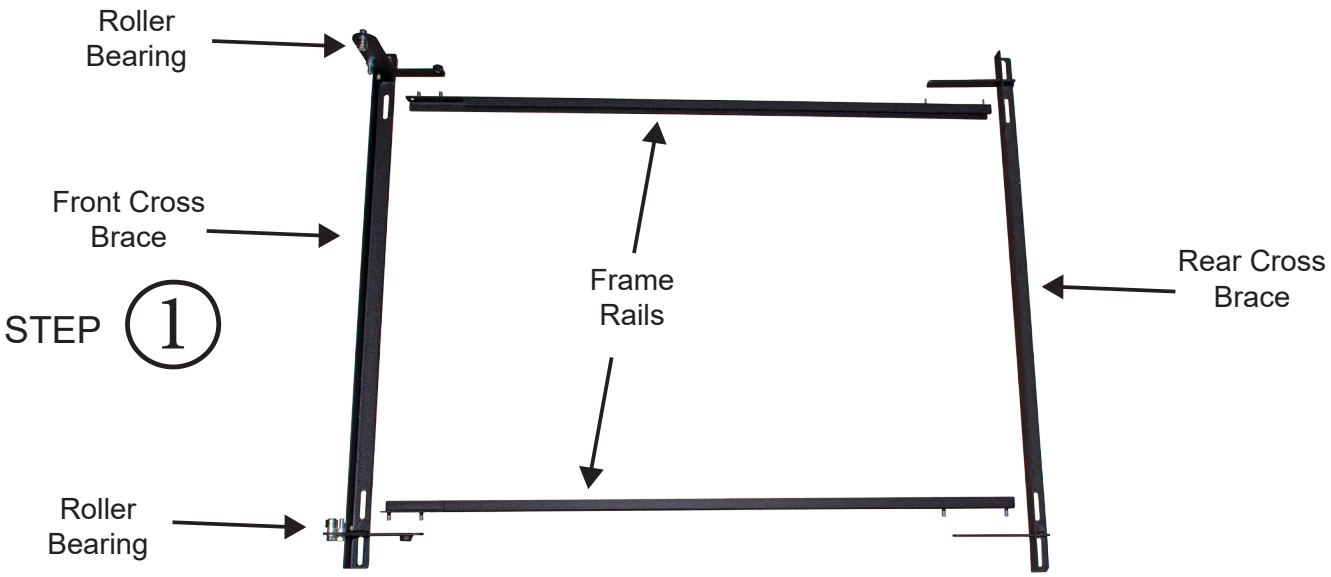

STEP 1

Lay out the frame rails (Item No. 2), and cross braces (Item No. 3). Note: the notched end of the frame rail is attached to the front cross brace with the roller bearings.

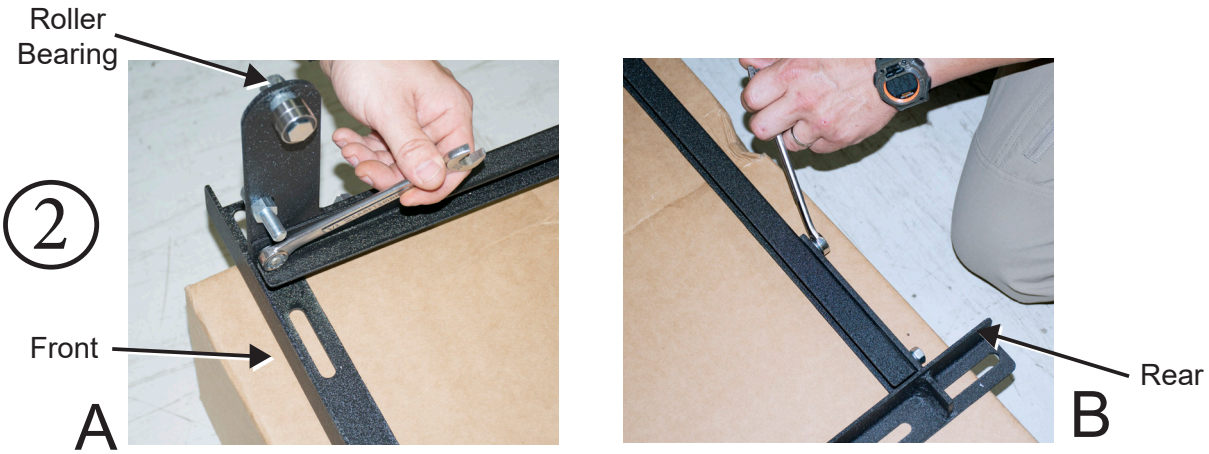

STEP 2

Bolt the cross braces to the frame rails with a ½ inch wrench using:

- $^{5}/_{16}$ inch split lock washer (Item No. 6)
- $^{5}/_{16}$ inch nut (Item No. 5)
- $^{5}/_{16}$ inch bolt (Item No. 13)

In the front (photo A above), install on each side two sets of split lock washers and nuts on the pems. Install the $^{5}/_{16}$ inch bolt from the inside, split lock washer and nut on the outside at the roller bearing corners. At two locations on the outside of each rear corner (photo B), install two sets of split lock washers and nuts on the pems.

STEP 3

Position the drawer so that the drawer rollers slide inside the frame rails C channel. Slide the drawer into the frame rail. The latches will engage when the frame is completely mounted.

STEP 4

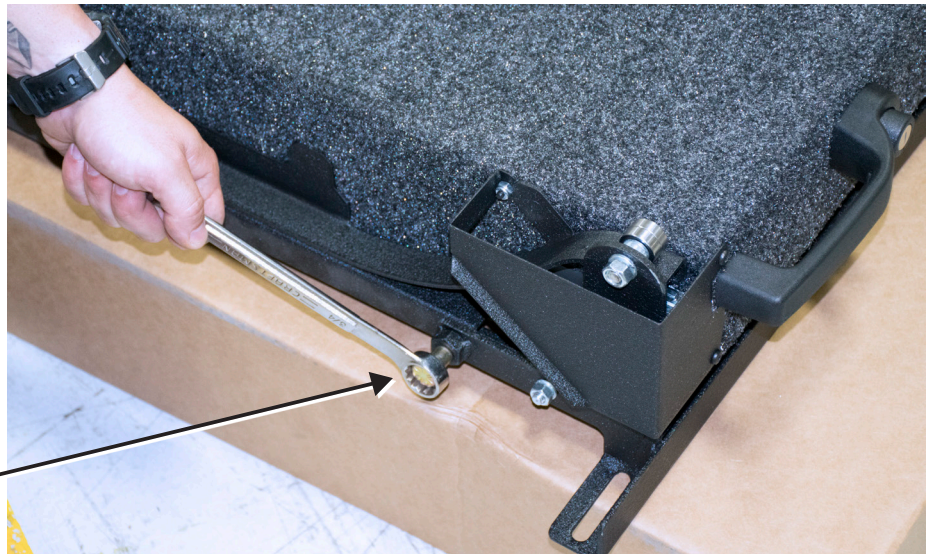

Using a ¾ inch wrench, install the ½ inch stop bolts (Item No. 4) on each of the frame rails. Tighten the bolts all the way to the bolt shoulder. Turn the Cap-Pack® Sport over so the drawer is rightside up.

STEP 5

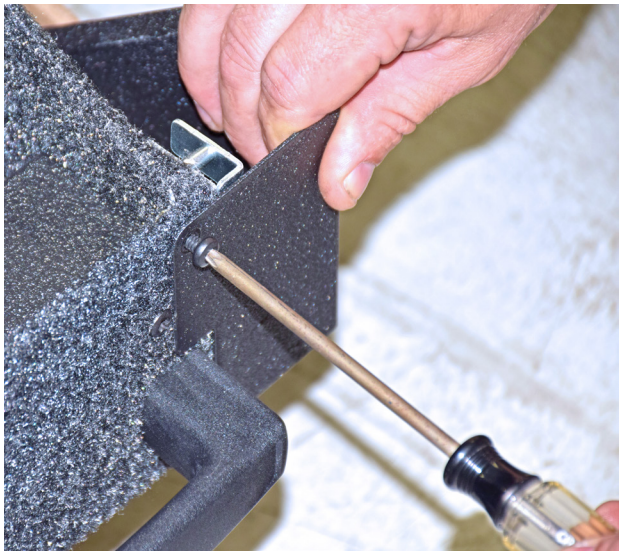

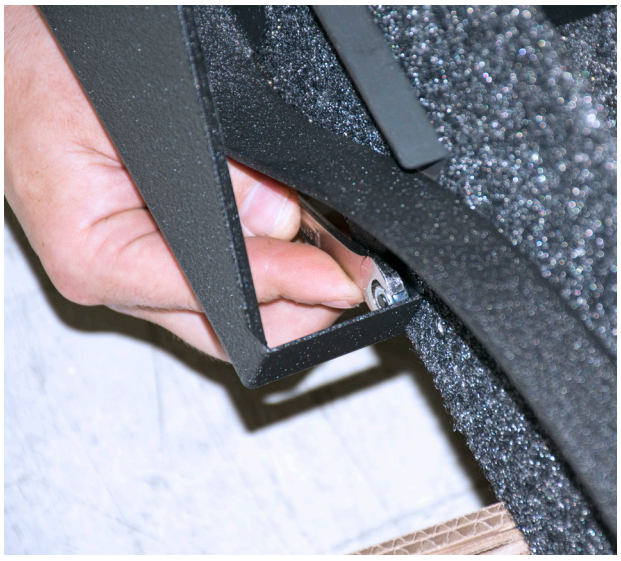

Using the Torx driver and ⅜ inch wrench, install the provided screws (Item No. 7) and nuts (Item No. 8), to secure the latch guards to the drawer. Note: Install the nut on the outside of the drawer.

Congratulations! You have assembled the Cap-Pack® Sport. Refer to the installation instructions for installing it into your truck cap.